


Mounting Instructions

For PC5921, PC5921EXT and PC5921EXT/R

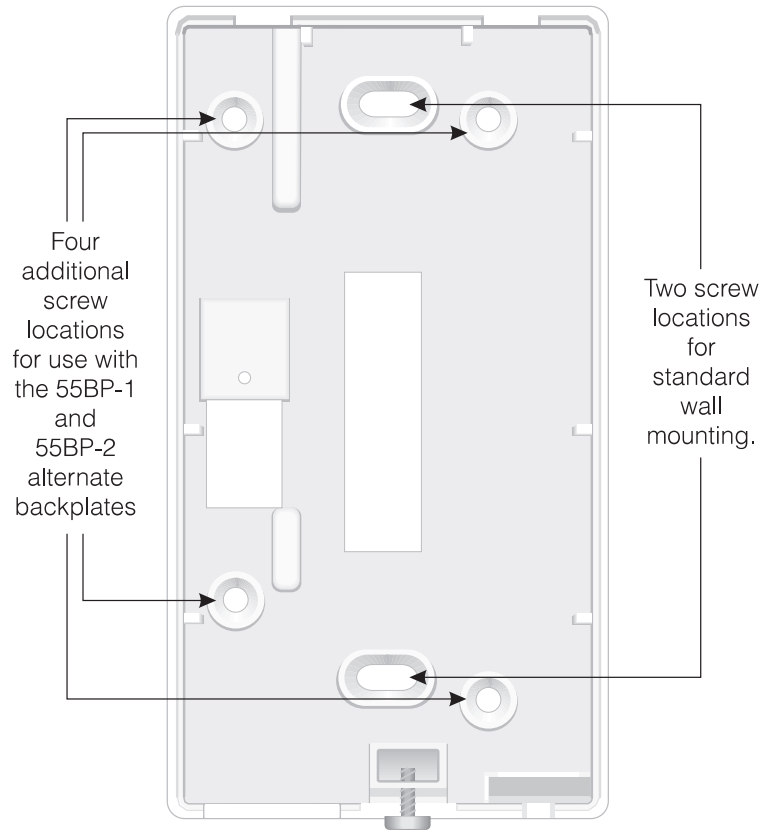

Four additional screw locations for use with the 55BP-1 and 55BP-2 alternate backplates

Two screw locations for standard wall mounting.

Ensure proper orientation of backplate.


The screw hole faces towards the floor.

Directions:

- 1 Locate the desired placement of the unit.
- 2 Place the backplate against the wall and mark the desired screw locations.
- 3 We suggest that wall anchors be used for all screw locations. When the anchors have been placed, secure the backplate to the wall.
- 4 Secure the front to the backplate.

Mounting Instructions

For PC5921, PC5921EXT and PC5921EXT/R

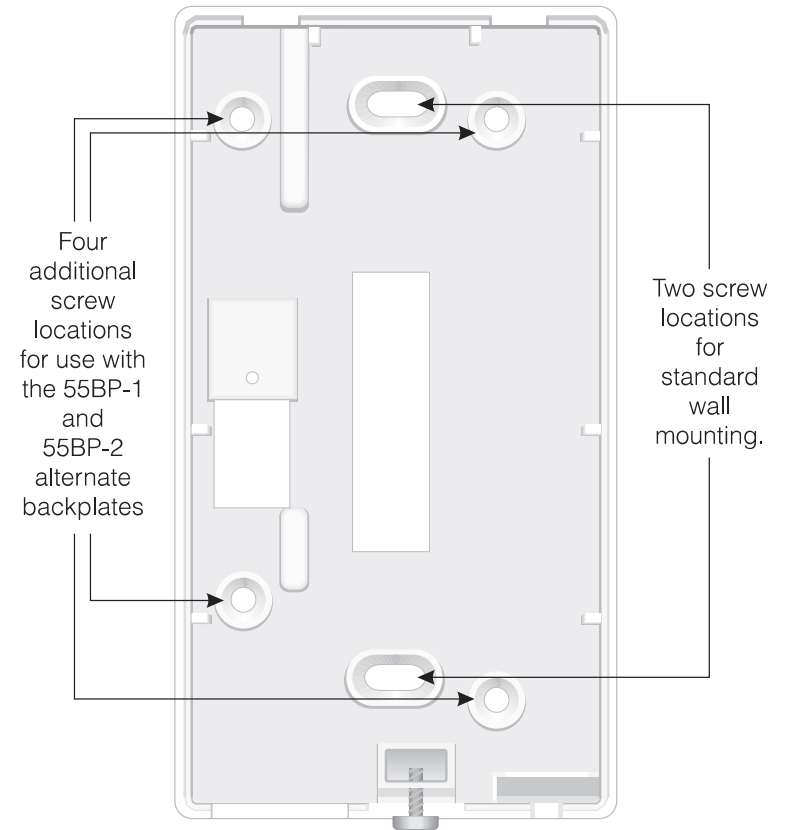

Four additional screw locations for use with the 55BP-1 and 55BP-2 alternate backplates

Two screw locations for standard wall mounting.

Ensure proper orientation of backplate.

The screw hole faces towards the floor.

Directions:

- 1 Locate the desired placement of the unit.
- 2 Place the backplate against the wall and mark the desired screw locations.
- 3 We suggest that wall anchors be used for all screw locations. When the anchors have been placed, secure the backplate to the wall.
- 4 Secure the front to the backplate.

©1997 Digital Security Controls Ltd.
1645 Flint Road, Downsview, Ontario, Canada M3J 2J6
Tel. (416) 665-8460 • Fax (416) 665-7498 • Tech. Line (800) 387-3630
Printed in Canada 29002294 R0



Mounting Instructions



PC5921
PC5921EXT
PC5921EXT/R

©1997 Digital Security Controls Ltd.
1645 Flint Road, Downsview, Ontario, Canada M3J 2J6
Tel. (416) 665-8460 • Fax (416) 665-7498 • Tech. Line (800) 387-3630
Printed in Canada 29002294 R0



Mounting Instructions



PC5921
PC5921EXT
PC5921EXT/R