

Wireless push button RC-28

Description

The RC-28 is designed to be used as a wireless door bell button. It works with the UC-260 receiver as well as the UC-216, UC-222 and the UC-280 receivers.


Specification

Power	6 V battery (L1016 type)
Battery life time	typically 1 year
Frequency	433.92 MHz
Operating environment	Outdoor sheltered
Operating temperature	from -20 °C to +50 °C
Operating humidity	from 25 % to 75 %
Storage temperature	from -20 °C to +70 °C
Complies with EN ETSI 300220, ETS 300683 and EN 50134.	

Installation

Note: Do not install the RC-28 on a metal surface. This could lead to significant reduction of the working distance

- Open the name label cover (see Fig.1).
- Unscrew the screw under the cover
- Remove the rear part of the button by pressing in the released screw.
- Attach the rear part in the desired location.
- Install the button to the rear part.
- Write the desired name on the label and reattach its cover
- Enroll the button to the receiver(s) – see the receiver's installation manual for details

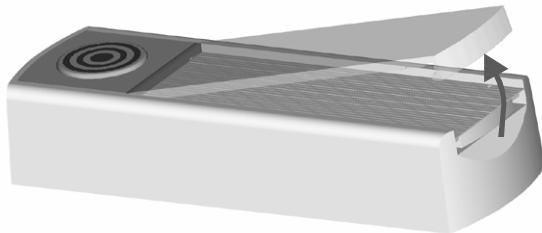

Battery replacement

The battery life time for the wireless button is typically one year. After this period you should replace the battery with a new one. When a new battery is installed, press the button. The red indicator should flash brightly if the battery is correctly connected.

The RC-28 requires no other specific maintenance. Do not use any organic solvent for cleaning.