


WLS907

Wireless Universal Transmitter

INSTALLATION INSTRUCTIONS

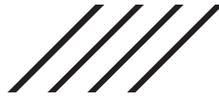

Remove Cover

To remove the cover of the universal transmitter, insert a small screwdriver in the slot on the side of the unit. Push the tab to release the cover.

Install Batteries

Use care when installing the batteries. Follow the guidelines below:

1. Observe the correct polarity (see Figure 1).
2. Install the batteries positive (+) side first (see Figure 2).

Use only Eveready Alkaline Energizer batteries. Only replace low batteries with fresh ones. Always replace all three batteries at the same time.

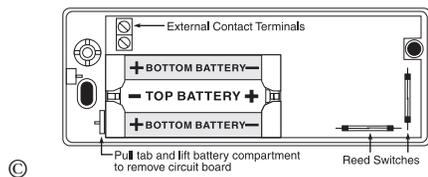


Figure 1

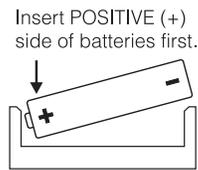


Figure 2

Locate Transmitter

Locate where the transmitter is to be mounted. Perform the **Module Placement Test** to ensure that the selected location is in range of the wireless receiver (see receiver Installation Manual for instruction).

Determine where the magnet will be placed. In order to activate the reed switch, the magnet must line up with the end of the transmitter (see Figure 3).

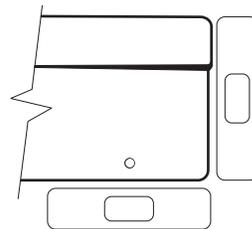


Figure 3

Remove Circuit Board

Before mounting the unit, remove the circuit board. Pull the tab located next to the battery compartment. Gently lift the circuit board out of the plastic (see Figure 1).

NOTE: Do not touch the coils on the circuit board as this may damage the unit.

Mount Transmitter and Magnet

Mount the backplate of the transmitter using the screws provided and replace the circuit board. The head of the screw must be below the circuit board so that the sensor is not shorted out. Use flat-headed screws only. Mount the magnet no more than 1/4" from the transmitter. Use the spacers provided (see Figure 4). Once the unit and magnet are mounted, open and close the window/door to ensure that none of the parts interfere with this movement. Only one magnet can be used per transmitter. Metal will block/reflect a wireless signal. DO NOT mount the WLS907, or any other wireless component, on or near large metal objects (i.e. metal doors, metal window blinds). Instead, find a close location that provides 'good' test results and use the external contacts instead of the built-in reed switch. Try to avoid

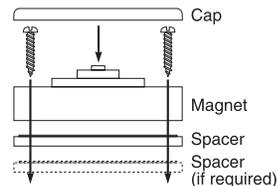


Figure 4

mounting the wireless receiver in a basement or near large metal surfaces (i.e. metal ductwork) as this can reduce the range.

Using External Contacts

The external contact terminals can be used to connect external contacts or other switches/devices to the universal transmitter. Install the additional device as per the manufacturer's instruction. Connect the device to the contact terminals of the WLS907.

The input is normally closed and is not supervised. A normally open version is also available (WLS907N)

For UL installations, the wires connecting the external device to the input terminals must not exceed 36" (90.5 cm) in length. The contact and transmitter must also be in the same room.

For non-UL installations, the wires connecting the external device to the input terminals can be any length **provided that the resistance of the wire does not exceed 100Ω**.

Only one contact can be used. If an external contact is used, do not install the magnet.

Enrolling a WLS907

On the back of the door contact housing, there will be two serial numbers, a five digit and six digit. Please refer to your receiver installation manual for information on which serial number should be enrolled. NOTE: If using a WLS900 system, you must use the 5 digit serial number.

FCC COMPLIANCE STATEMENT

CAUTION: Changes or modifications not expressly approved by Digital Security Controls Ltd. could void your authority to use this equipment.

This equipment generates and uses radio frequency energy and if not installed and used properly, in strict accordance with the manufacturer's instructions, may cause interference to radio and television reception. It has been type tested and found to comply with the limits for Class B device in accordance with the specifications in Subpart "B" of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference in any residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to television or radio reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient the receiving antenna
- Relocate the alarm control with respect to the receiver
- Move the alarm control away from the receiver
- Connect the alarm control into a different outlet so that alarm control and receiver are on different circuits.

If necessary, the user should consult the dealer or an experienced radio/television technician for additional suggestions. The user may find the following booklet prepared by the FCC helpful: "How to Identify and Resolve Radio/Television Interference Problems". This booklet is available from the U.S. Government Printing Office, Washington, D.C. 20402, Stock # 004-000-00345-4.

Limited Warranty

Digital Security Controls Ltd. warrants that for a period of twelve months from the date of purchase, the product shall be free of defects in material and workmanship under normal use and that in fulfillment of any breach of such warranty, Digital Security Controls Ltd. shall, at its option, repair or replace the defective equipment upon return of the equipment to its repair depot. This warranty applies only to defects in parts and workmanship and not to damage incurred in shipping or handling, or damage due to causes beyond control of Digital Security Controls Ltd. such as lightning, excessive voltage, mechanical shock, water damage, or damage arising out of abuse, alteration or improper application of the equipment.

The foregoing warranty shall apply only to the original buyer, and is and shall be in lieu of any and all other warranties, whether express or implied and of all other obligations or liabilities on the part of Digital Security Controls Ltd. This warranty contains the entire warranty. Digital Security Controls Ltd. neither assumes, nor authorizes any other person purporting to act on its behalf to modify or to change this warranty, nor to assume for it any other warranty or liability concerning this product.

In no event shall Digital Security Controls Ltd. be liable for any direct, indirect or consequential damages, loss of anticipated profits, loss of time or any other losses incurred by the buyer in connection with the purchase, installation or operation or failure of this product.

Warning

Digital Security Controls Ltd. recommends that the entire system be completely tested on a regular basis. However, despite frequent testing, and due to but not limited to, criminal tampering or electrical disruption, it is possible for this product to fail to perform as expected.



© 1998 Digital Security Controls Ltd.
1645 Flint Road, Downsview, Ontario, Canada M3J 2J6
Tel. (416) 665-8460 • Fax (416) 665-7498 • 1-800-387-3630
Printed in Canada 29001837 R5

NOTE: Refer to the PC5132 and PC5010 Installation Instructions for UL requirements.